


Q3

USER GUIDE

**Read Me to Get the Most Out of
Your Device...**

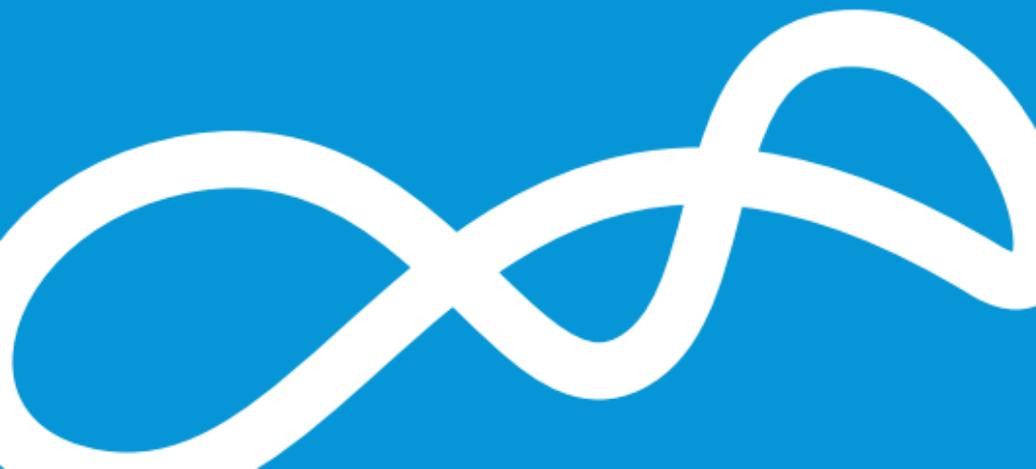

TO GET STARTED

1. Turn The Q3 On
2. Put It On
3. Listen In

Model: Q3

Contents


Charge Your Earpiece.....	6
Wearing the Q3.....	7
Pair Your Earpiece.....	7
Use Your Voice to Control the Q3.....	9
Making Calls.....	11
Taking Calls.....	12
Volume Control.....	13
Changing the Ear Bud.....	14
Using 2 Phones (Multipoint).....	14
Call Waiting and Conferencing*.....	15
Listening to Audio.....	16
Reset the Q3.....	17
Free Android Application.....	18
Text Message Readout on iPhone.....	19
Reconnecting to the Earpiece.....	20

Button Commands.....	20
Help and Support.....	22
Terms and Conditions.....	23
Contact Us.....	24

BlueAnt

Welcome to the **BlueAnt Q3**: the premium smartphone earpiece, featuring BlueAnt's intuitive voice user interface.


Designed for sound, style and comfort, the Q3 also comes with Siri and Google Voice Actions integration, rapid charge technology to keep you connected, and high definition wideband audio.

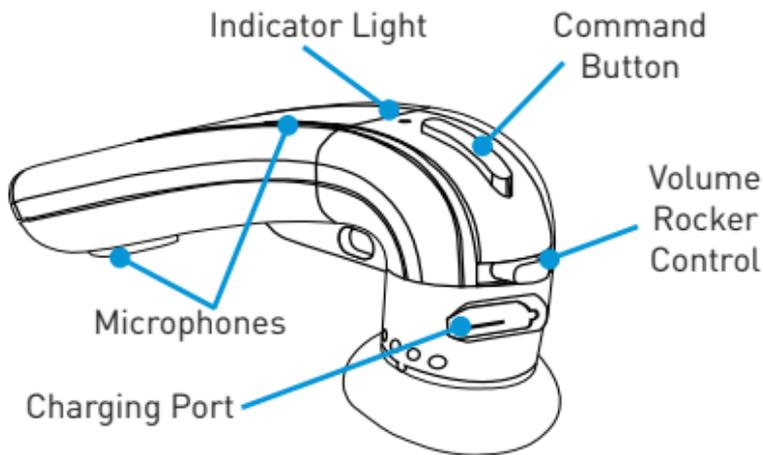

Charge Your Earpiece

Your earpiece has been given an initial partial charge to get you started, but for best results we recommend you fully charge it using the supplied USB cable and adaptor.


- > Charge the Q3 whenever it announces that the battery is **Very Low**. It will switch off automatically if the battery runs out.
- > Your earpiece features **Rapid Charge** technology. It will charge to 50% capacity in just 30 minutes (a full charge takes about 2 hours).
- > During charging, the indicator light flashes red.
- > When the light goes white, the charge is complete.
- > The Q3 features an iPhone battery meter so you can check your battery status at a glance.

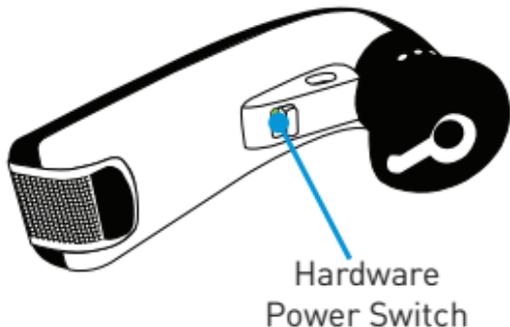

Wearing the Q3

You can wear the Q3 in either ear. For best results:

- > Rotate the ear gel as shown here.
- > Make sure that the earpiece is angled towards your mouth.

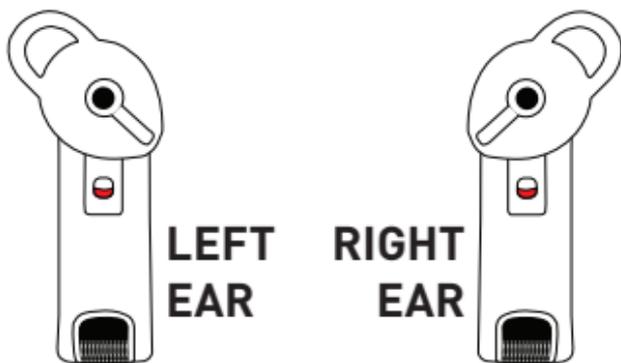

Pair Your Earpiece

To use the Q3 you need to pair it with your phone.

1. Slide the hardware power switch across to turn the Q3 on and then put the Q3 in your ear.
2. If this is the first time you have used the Q3 it will go straight

to pairing mode. The voice prompts will start to talk you through the pairing process.

For subsequent pairings, click the **Command** button and wait for the Q3 to ask you to **Say A Command**. Then say **Pair Me**.


3. Follow the voice prompts to pair the Q3 with your phone. If requested, the pairing code is **0000** (four zeros).

Note: If your phone prompts you to allow a connection to the Q3, you **must** select "YES" or "OK".

On Android devices a message about phonebook access may appear in the notifications area at the top of the screen. This is to allow access to your contacts so that the Q3 can announce caller names.

You must swipe your finger over this message and accept the transfer request. If you miss this step you will need to:

1. Delete the Q3 pairing from your phone.

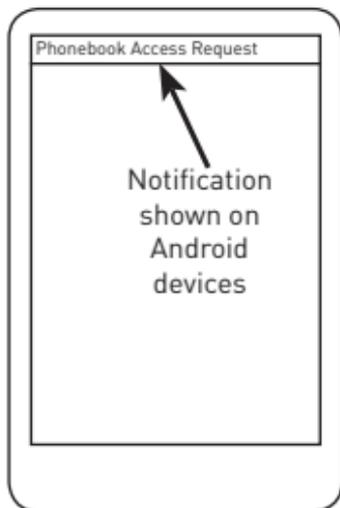


2. Power the phone off and back on.
3. Reset your Q3 and pair it with your phone again.

This is due to the way the Android PBAP request system works.

Note: Some other phones may also require you to grant phonebook access permission. Select “YES” or “OK” when prompted.

Use Your Voice to Control the Q3

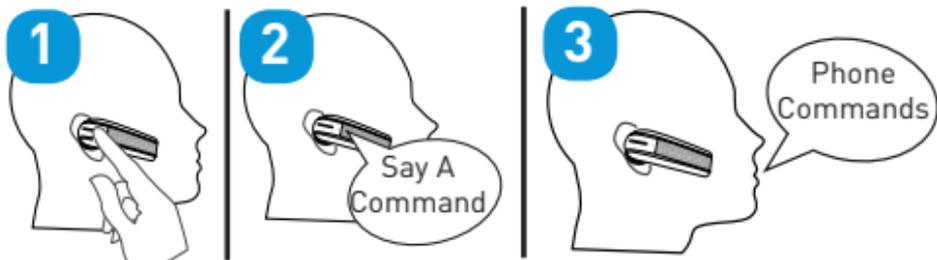

The Q3 is voice controlled. Simply:

1. Click the **Command** button
2. Wait for the Q3 to ask you to **Say A Command**
3. Say the command:

Command	Description
Am I Connected?	The Q3 will check if your phone is connected, and attempt to connect if not.
Call Back	Calls back the last incoming call.
Check Battery	Tells you the battery level on the Q3.
Pair Me	Puts the Q3 into pairing mode. Any connected phone will be disconnected.
Phone Commands	<p>Activates your phone's voice dialing feature (if supported). Depending on your phone model, you may need to record voice tags on the phone to use this feature.</p> <p>On the iPhone 5 or iPhone 4S this command activates Siri.</p> <p>On Android devices this command activates Google Voice Actions.</p>
Redial	Redials the last outgoing call.

Command	Description
What Can I Say?	Tells you the available voice commands.

Making Calls

Voice Dialing

Double click the **Command** button or use the **Phone Commands** voice command to activate your phone's voice dialing feature (if available).

Once you have activated this feature, you are using your phone's voice recognition software. **Please check your phone manual** to find out what commands your phone supports.

- > On the iPhone 5 or iPhone 4S this feature activates **Siri**. There's no need to touch or unlock your iPhone. **Note:** Siri must be enabled on your phone. Go to **Settings > General** on your iPhone and check that **Siri** is set to **ON**. If you have set a passcode lock you will need to set **Siri** to **ON** in the passcode lock menu.
- > Android users: use this feature to access **Google Voice**

Actions (if available). **Note:** Depending on your handset, you may need to disable the phone password lock to use voice dialing over Bluetooth. Check your phone manual for further information on this feature.

Other Ways To Make Calls

- > Dial the number on your phone. The audio automatically transfers to the earpiece.
- > Use the **Redial** or **Call Back** commands.

Taking Calls

When the phone rings, the Q3 will announce the caller's name.* Wait for the prompt to ask you if you want to take the call, and then say **Answer** or **Ignore**. Or:

- > To accept the call click the **Command** button once.
- > To reject the call double click the **Command** button.

* If your phone supports the Bluetooth Phone Book Access Profile (PBAP). If your phone does not support PBAP, or you receive a call from a number that is not in your phonebook, the Q3 will say "Incoming Call. Answer or Ignore?"


During a call, click the **Command** button to end the call.

Volume Control

Use the volume rocker:

- > Push up for volume up.
- > Push down for volume down.

Note: See the next section for advice if you wear the Q3 in your left ear.

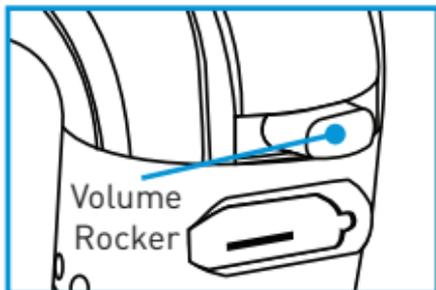

Wearing the Q3 in your Left Ear?

The Q3 volume controls are set by default for users wearing the earpiece in their right ear.

If you prefer to wear your earpiece in your left ear, follow these simple steps to swap the volume orientation so that you can still push up for volume up and down for volume down:

1. Put the Q3 in your left ear.
2. Hold down the **Command** button, and push and hold the volume rocker in the up position. Hold both buttons together for about 3 seconds.

If you want to switch back, put the Q3 back in your right ear and repeat this procedure.

Note: If you reset your earpiece, it reverts to the default volume control orientation (right ear).

Changing the Ear Bud

Your Q3 is supplied with a choice of ear buds in different sizes so that you can choose the one that fits best. If you want to change the ear bud, remove the attached one by gently lifting it away from the Q3.

Gently press the replacement ear bud onto the Q3 and push it firmly to secure it in place.

Using 2 Phones (Multipoint)

Up to 2 devices can connect to the earpiece at the same time. If either phone rings, you can answer it with the earpiece.

Use the **Pair Me** command to put your Q3 back into pairing mode to pair another phone. Any currently connected phone will be disconnected during pairing, so you will need to reconnect afterwards.

Which Phone is Used for Calls?

When you have two phones connected you can always answer an incoming call from either phone.

If you initiate a call through the earpiece (for example by saying **Phone Commands**) then the call takes place on the **primary phone**: the one that connected to the earpiece first.

Call Waiting and Conferencing*

If you receive an incoming call while you are already on a call the Q3 will play a tone to alert you.

To	Do This
End the active call and answer the incoming call	Click the Command button
Keep the active call, reject the incoming call	Double click the Command button
Put the active call on hold, answer the incoming call	Hold the Command button for about 1 second

To	Do This
Switch between the active and held call	Hold the Command button for about 1 second
Conference the active and held call	Hold the Command button for about 3 seconds

If you are using multipoint you can also use these controls to switch between calls on both phones.

Note: You can only conference together calls received on the same phone (although you can have conference calls running on both phones at the same time).

* To use these features, your phone and network must support call waiting and call conferencing.

Listening to Audio

The Q3 supports A2DP audio streaming. If your phone supports the A2DP profile then simply start playing music or any other audio (including turn-by-turn directions from a GPS application on your phone) and it will automatically transfer to the earpiece.

If the phone rings the audio will mute. You can use your voice to answer or ignore the call. Or:

- > Click the **Command** button to accept the call.
- > Double click the **Command** button to ignore the call.

The audio will resume when the call ends.

If you want to exit A2DP streaming mode to do something else:

- > Click the **Command** button to activate the Q3's voice control feature. If you do not say one of the Q3's voice commands within a few seconds the music will resume playing; or
- > Double click the **Command** button to activate your phone's voice dialing feature (if available).

Reset the Q3

If you are having problems with the Q3, you can reset it and start again.

Resetting the Q3 will clear all the stored pairing settings, reset the volume orientation to the default and put the device back into pairing mode.

To reset the Q3:

1. Delete any existing pairing information from your phone and turn the phone off and back on again to clear the phone memory.
2. Make sure the Q3 is switched on but not connected to any phones.
3. Hold down the **Command** button and **Vol +** together for about 5 seconds.
4. The Q3 will announce that it has been reset.
5. Now use the hardware switch to turn the Q3 off and back on again.

You will now need to pair your phone with the Q3 again.

Free Android Application

- > Reads your incoming text messages
- > Helps with pairing and setup

Go to the Google Play Store and search for “**BlueAnt**” to download and install this free application. Once the application is installed you will hear your text messages read aloud

automatically on your BlueAnt device as they come in.

Supports Android handsets running Android version 2.1 or above.

Scan this code on your phone with a QR code reader to download the application:



Android is a trademark of Google, Inc, and its use is subject to its permissions.

Text Message Readout on iPhone

If your iPhone supports Siri, simply double click the **Command** button and when Siri starts say **Read My Messages**.

Siri will then read your messages back.

Reconnecting to the Earpiece

If you take your phone out of range of the earpiece for more than 2 minutes, the Q3 will go into “sleep mode” to save battery. When you bring your phone back into range, simply double click the **Command** button to reconnect.

Alternatively, use the hardware switch to turn the Q3 off whenever you are not using it. The Q3 will automatically attempt to reconnect to your phone when you switch it on. Depending on your phone, this may take a few seconds. Please ensure that Bluetooth is enabled on your phone.

Button Commands

Function	Do This	When
Activate voice dialing, Siri or Google Voice Actions (if available) on the primary phone	Double click the Command button	Phone connected but not on a call

Function	Do This	When
Answer a call	Click the Command button	Phone ringing
End a call	Click the Command button	During an active call
End the active call and answer an incoming call	Click the Command button	Phone ringing during an active call
Reject a call	Double click the Command button	Phone ringing
Keep the active call and reject the incoming call	Double click the Command button	Phone ringing during an active call
Hold active call and switch to incoming or held call	Hold the Command button for about 1 second	During an active call (with phone ringing or call on hold)

Function	Do This	When
Conference held and active call	Hold the Command button for about 3 seconds	During an active call (with call on hold)
Enter pairing mode	Hold the Command button for about 1 second	Earpiece switched on but not connected to any phones
Swap volume control orientation	Hold the Command button and Vol - for together for about 3 seconds	Earpiece switched on but not on a call
Reset	Hold the Command button and Vol + together for about 5 seconds	Earpiece switched on but not connected to any phones

Help and Support

If you are having trouble getting the Q3 to work, please visit

www.blueantwireless.com for online help, support, and troubleshooting tips.

Please contact us before returning the Q3 to a store and we will help you through any difficulty you may have.

Terms and Conditions

By using this product, you are agreeing to BlueAnt's terms and conditions, available at www.blueantwireless.com and on the supplied warranty information card.

Please protect your ears. All BlueAnt devices are designed to reach volumes of up to 100 decibels. Prolonged use at high volumes may affect your hearing capacity and may result in noise induced hearing loss (NIHL). Please read the enclosed safety card for information about the safe use of BlueAnt products.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BlueAnt Wireless is under license. Android is a trademark of Google Inc., Apple, iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. BlueAnt and other trademarks are trademarks of

BlueAnt and other organizations and may not be used without permission. The BlueAnt logo is registered in the U.S. Patent and Trademark Office and globally with the World Intellectual Property Organization under the Madrid protocol.

Contact Us

North America: 1 855 9 258 3268

UK: 0800 285 1272

Australia: 1300 669 049

France: 0800 913 467

New Zealand: 0800 443 122

Spain: 900 838 030

Singapore: 800 130 1940

India: 000 800 100 4103

Thailand: 001 800 13 203 2852

Hong Kong: 800 905 394

Taiwan: 00 801 127 405

China: 400 120 0974

www.blueantwireless.com/support

HELP AND SUPPORT



Visit **register.blueantwireless.com** to register your BlueAnt device.



Visit **www.blueantwireless.com/support** for online help and support or to contact the BlueAnt Technical Support team.



North America	Australia	New Zealand	UK
1 855 9 258 3268	1300 669 049	0800 443 122	0800 285 1272



Visit **www.blueantwireless.com/buy** to buy BlueAnt products, accessories and spare parts.